



Harrier Screed Box Assembly

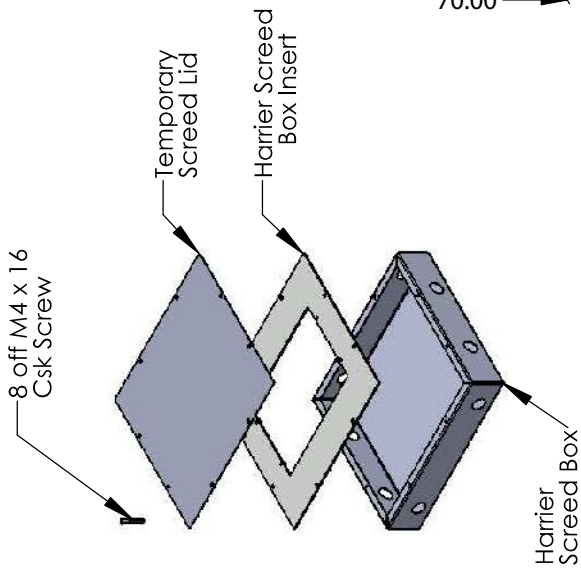

Minimum space required to install screed box:

350.00
310.00
67.00

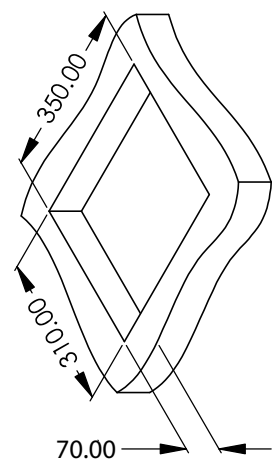


1

- A** - Remove temporary lid and support panel
- B** - Install screed box securely and attach conduit or services, ensuring that any open holes are covered
- C** - Reattach temporary lid and support panel in preparation for the concrete pour.


2

Once the concrete has cured remove and discard the temporary lid.

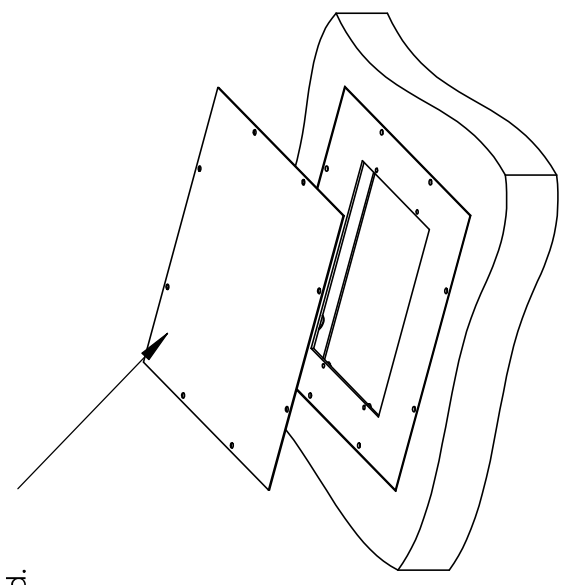

3

Install the Harrier floor box as per standard assembly instructions.

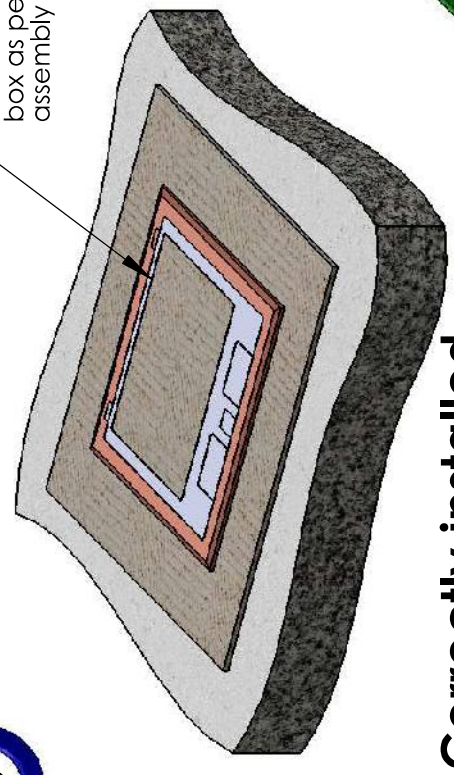

Correctly installed screed box and Harrier floor box.